

Capri125

User Manual

This user manual contains important notes as well as instructions on the use of the product. Read the user manual carefully and keep it in a safe place.

Table of Contents

1.	Important Notes	- 3 -
2.	Scope of Delivery	- 4 -
3.	Overview of Features	- 4 -
4.	Charging the Battery	- 6 -
5.	System Settings	- 6 -
6.	Music Playback	- 7 -
7.	Alarm and Sleep Timer	- 8 -
8.	Troubleshooting	- 9 -
9.	Technical Specifications	- 10 -

1. Important Notes

Read and observe all warnings and explanations before using this product. Damage that is caused due to improper use is not covered by the warranty.

CAUTION

Risk of Shock or Fire

- Keep the product and its accessories away from rain and water. Do not place any containers with liquid (e.g., vases) on or near the product. If liquid gets inside the product, turn it off immediately and contact customer service.
- Keep the product and its accessories away from fire and sources of heat as well as direct sunlight.
- In the event of a thunderstorm, turn the device off and unplug it.

Short circuit and fire hazard

- Before you plug in the device, please ensure that the power supply corresponds to the values specified on the back of the device. If the voltage supply differs from this, do not plug it into the outlet.

Risk of Property Damage

- Do not place the product or other objects on the electrical cord or on other electronic devices.
- If the temperature is below 40° F (5° C) upon receipt of the product, unpack it and wait until it reaches room temperature before plugging it in.
- Some components of the product are made out of glass. Therefore, please handle it with care so that the glass does not break and cause injury or damage to property.

Danger of Overheating

- Make sure that there are at least 4 inches (10 cm) of space around the unit for ventilation.

Cleaning

- Turn the device off prior to cleaning.
- Do not use organic solvents such as rubbing alcohol or paint thinner for cleaning. Otherwise, this will damage the device.
- Only use cotton or microfiber cleaning cloths.
- Do not spray or drip water on the housing or the speakers. Otherwise, this can damage the device.

Environmental Protection

- This product was manufactured from high-quality and reusable materials. They may not be disposed of with household waste. Please familiarize yourself with the regulations regarding the disposal of electronic and electrical devices as well as batteries. Proper disposal of your electronic waste protects the environment and public health. This product contains a battery that may not be disposed of with household waste. Please familiarize yourself about the regulations regarding the disposal of old batteries. Proper disposal of the battery protects the environment and public health.

1. Important Notes

Batteries/Rechargeable Batteries

- Risk of battery explosion if improperly handled. Replace the rechargeable batteries only with the same or an equivalent type. Please contact a specialist workshop to have this carried out.
- Batteries and rechargeable batteries may not be exposed to excessive heat as caused by direct sunlight, fire, or similar.


Adapter

- Please only use the power adapter that is listed in the operating instructions.
<BRAND: Flypower>,
<Model: PS30D180K1000ED>,
<Input: 100–240 V~, 50/60 Hz>
<Output: 18.0 V =, 1000 mA>
- Only use the accessories specified by the manufacturer.
- The device must be unplugged in order to disconnect it from the power supply grid. Therefore, the outlet needs to be within reach and freely accessible.

2. Scope of Delivery

- 1 KAPSCH Capri125 audio system
- 1 User Manual
- 1 Power adapter (18 V = 1 A)

3. Overview of Features

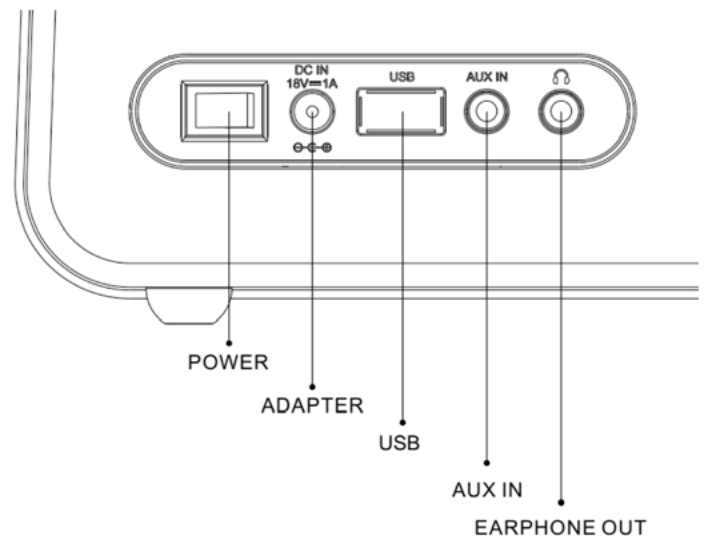

POWER: Power switch, 1 means ON, 0 means OFF


ADAPTER: Power supply

USB: 5V/1A

AUX-IN: Analog audio input with 3.5 mm jack

EARPHONE OUT: 3.5 mm earphone jack

3. Overview of Features

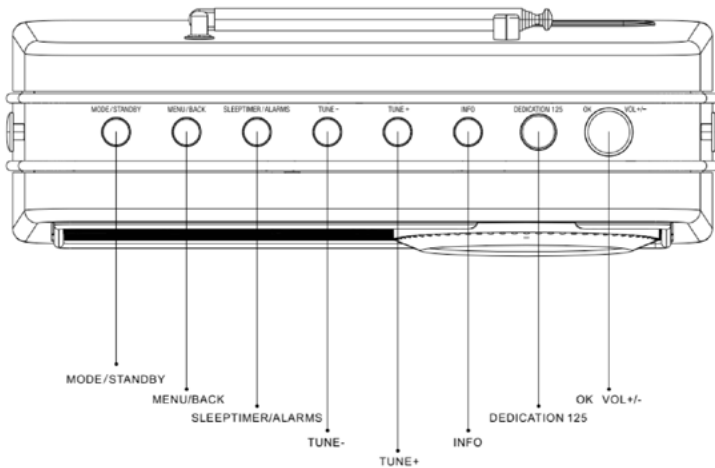

Button Functions

1. MODE/STANDBY

Press and hold	Press briefly
Standby mode On/Off	To select the operating mode

2. MENU/BACK

Press and hold	Press briefly
/	Shows the current mode / goes back one step

3. SLEEP TIMER/ALARMS

Press and hold	Press briefly
To set the alarm feature	To set the sleep timer

4. TUNE+, TUNE-

MODE	Press and hold	Press briefly
FM	Search	Set frequency
Bluetooth	Search	Switch songs
DAB	Search	Switch stations
AUX-IN Input	Search	/
MENU	Scroll through the menu	Menu navigation

5. INFO

Press and hold	Press briefly
/	Information about the current station or title

6. DEDICATION 125

Press and hold	Press briefly
Save the current station	Listen to the saved station or recall your favorite station

3. Overview of Features

7. VOL-/VOL+

MODE	Turn the knob
Playback Mode	Turn clockwise to increase the volume; turn counterclockwise to lower the volume.
MENU	Menu navigation

OK

MODE	Press and hold	Press briefly
FM	/	Mute ON/OFF
Bluetooth	Connect/Disconnect	Playback/Pause
DAB	/	Mute ON/OFF
AUX-IN Input	/	Mute ON/OFF
MENU	/	Confirm

4. Charge

1. Before the first use, please use the adapter for at least 12 hours in standby mode to charge the machine fully.
2. When charging, the Power Display icon flashes.
3. Low power warning
When battery power is insufficient, the screen will display "Battery Low"
4. Do not leave the battery for too long without charging, this will damage your battery.

5. System Settings

The KAPSCH Capri125 audio system can be configured in the System Settings menu.

Available options:

- Equalizer
- Date/Time (Time/Date Wizard)
- Language
- Factory Reset
- Info
- Backlight
- Clock Style

5.1 Equalizer

There are several equalizer presets available. There is also a user-defined setting option: My EQ.

5.2 Time/Date Settings

5.2.1 Time/Date Settings Assistant

For manually setting the time.

5. System Settings

5.2.2 Automatic Update

Time synchronization via DAB, FM

The data from the DAB or FM station is used for the automatic update. The time is only synchronized if you have selected the corresponding operating mode.

5.2.3 Set Format

This option is used to switch between a 12-hour and 24-hour time display.

5.3 Language

The default language is English. There are 13 languages to choose from: English, German, Italian, French, Dutch, Polish, Spanish, Turkish, and many more.

5.4 Factory Reset

The Factory Reset option enables you to reset all parameters to the default factory settings. Date, time, and saved stations will be lost.

5.5 Info

Displays the details of the current system configuration, for example:

SW Version: Version number of the software

5.6 Backlight

This feature enables you to specify when and how the radio dims in standby.

- On level (in operation)
- Dim level (in standby)

5.7 Clock Style

This enables you to select the design of the displayed clock in standby mode. Please select between an analog and digital display.

6. Music Playback

6.1 DAB Radio Reception

Press the MODE button and select the DAB operating mode. When you select the DAB operating mode for the first time, or if the station list is empty, your radio will automatically begin a scan to search for available stations.

6.1.1 Station list

The list of radio stations found.

6.1.2 Scan

Select the Scan option and press the OK button to perform a complete search of radio stations.

6.1.3 Manual Tune

Turn the knob to select the desired DAB station from 5A to 13F and press OK to switch to the frequency or channel in question.

6.1.4 Prune Invalid

This feature enables you to remove all invalid stations from the list that are marked with a question mark before the station name.

6.1.5 Dynamic Range Compression (DRC)

Select either DRC high, DRC low or DRC off.

6.2 FM Radio Reception

Press the MODE button to switch to FM radio reception. Press and hold the Tune+/Tune- buttons to display the list of stations found. Press the Tune+/Tune- button briefly in order to change the reception frequency.

6.3 Bluetooth Mode

Press the MODE button to switch to Bluetooth operation.

6. Music Playback

6.3.1 Pair Bluetooth

When the Bluetooth feature is enabled, you can search for the Bluetooth name KAPSCH Capri125 with your smartphone, tablet, PC, notebook, or another device, pair it, and play music.

6.3.2 Switch Songs

Press TUNE+/TUNE- to switch songs.

6.3.3 Disconnect Bluetooth

If you want to pair another device and play music with it over Bluetooth, press and hold the OK button to disconnect Bluetooth. Afterwards, you will be able to pair with other devices via Bluetooth.

6.4 AUX-IN Signal Feed

Press the MODE button to switch to AUX input. In the AUX mode, you can connect any audio device to the speaker and use it as an external speaker.

7. Alarm and Sleep Timer

In addition to the clock and the calendar, there are two practical alarms with a snooze feature as well as a sleep timer, which switches the device off after a specified time. Here, each alarm can be programmed independently.

7.1 Alarm

To set or program an alarm, either press and hold the Sleep/Alarm button or select Menu > Main Menu > Alarms. Select the number of the alarm (1 or 2) and set the following parameters:

Enable: Off, Daily, Once, Weekends, or Weekdays.

Time: 12:00 AM (change this value as desired)

Date: 01-01-2007 change this value as desired – this option is normally not visible and is only shown if you select the Once option in the Enable field).

Mode: Buzzer, DAB oder FM

Preset: Last station listened to.

Volume: To save and activate these settings, scroll down and select save.

In the playback screen, the activated alarms are shown with a symbol.

In the standby screen, the activated alarms are shown with a symbol.

When the alarm sounds, press Standby or Alarm to turn it off.

7.2 Sleep Timer

To program the sleep timer, press the button Sleep/Alarm repeatedly to switch between the available intervals: Sleep OFF, 15 MIN, 30 MIN, 45 MIN or 60 MIN. The remaining time until the device turns off is displayed at the bottom of the playback screen.

Note: If no input signal is detected, the device will switch to standby mode after 15 minutes regardless of operating mode.

8. *Troubleshooting*

In the following table, you will find the most common problems and their solutions. Please read them through carefully.

Problem	Solution
Bluetooth signal transmission interrupted	The maximum range between the device and other Bluetooth devices may not exceed 30 feet. Furthermore, no obstructions may be located between the device and the Bluetooth device. You may need to use another Bluetooth device for playback.
Buzzing	Ensure that all cables are connected correctly. Use a different audio cable. Ensure that the buzzing is not coming from the device that is connected via the audio cable.
No power or the battery will not charge	Ensure that the power adapter and the device are correctly connected to each other. Check the supply voltage and the specifications of the power adapter.
No stations were found during the DAB or FM station scan	Ensure that the antenna is functioning correctly or reset the device.
No sound	Increase the volume. Select another signal source. Ensure that all cables are connected correctly.
No sound when connected via the AUX-IN input	Check that the audio cable is connected correctly.

9. Technical Specifications



Model	KAPSCH Capri125
Speaker	1 broadband speaker, 3 inches
Frequency response	80 Hz–16 KHz (-10 dB)
Amplifier	Class D, 5 W x 1 channel
Harmonic distortion	< 10 %
Signal-to-noise ratio	> 75 dB(A)
FM Frequency Range	87,5 MHz to 108 MHz
DAB Frequency Range	174 MHz to 240 MHz
Playback Mode	Bluetooth/AUX-IN/FM/DAB
Adapter	18 V = 0.1 A
Battery	Lithium battery, 2200 mAh, 11.1 V
Power consumption at standby	< 1 W
Dimensions	222.7 mm x 155.4 mm x 73 mm
Bluetooth	Version V2.1+ EDR Maximum HF transmission power < 15 dBm Frequency bands 2,402 MHz–2,480 MHz

Kapsch TrafficCom AG hereby declares that this device complies with the fundamental requirements and other relevant provisions of Directive 2014/53/EU. The complete text of the EU conformity declaration can be found at the following address: www.kapsch.net/capri125

This device complies with Part 15 of the FCC regulations. Its operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's permission to operate the device. This device was tested and complies with the limits for Class B digital devices pursuant to Part 15 of the FCC regulations. These limits are designed to provide reasonable protection against harmful interference in a residential complex. This device generates, uses, and can radiate high frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that no interference will occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference through one or more of the following measures:

9. Technical Specifications

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit that is not connected to the same one as the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



This symbol on the product or on its packaging indicates that this product may not be disposed of with household waste. It must be brought to an electrical and electronic waste collection facility for recycling and disposal. By ensuring the adequate disposal of this product, you are also helping to prevent potential negative consequences for the environment and public health. Recycling materials helps to preserve our natural resources. For additional information about recycling this product, please contact your local authority, your local disposal center, or the seller of the product.

Warranty Conditions

The warranty period begins as of the date that you turn on the device for the first time. If a material or manufacturing defect with the device occurs within 24 months of this date, the product will be repaired or replaced free of charge at our discretion. If the defect is covered by our warranty, you will receive the repaired product or a new product. No new warranty period begins upon the repair or replacement of the product.

Processing for Warranty Claims

Please contact our support (see our website). Our support may be able to help you with troubleshooting. If not, you will receive additional instructions regarding where you can send the device.

Support (German/English):
capri125@kapsch.net

Importer:
Kapsch TrafficCom AG
Am Europlatz 2
1120 Vienna, Austria

Manufactured in China